Nomadic Instand Set-up Instructions




Frames


• Lie the frame on the floor with the red studs facing the front.



- Pull the frame up and grasp two of the centre hubs and lift the frame open to shoulder height ensure you handle the frame at the hubs.
- Once frame is expanded, the row of red hubs (or red studs) should be on the floor facing forward.

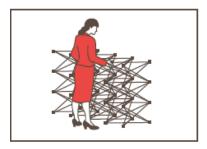

• Press front and back hubs in the centre of the frame until it locks into position (front and back hubs do not meet – but you will feel it lock into place).

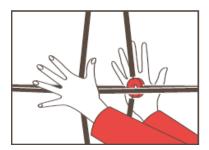



Nomadic Instand



Set-up Instructions


Magnetic Bars & Lights


• Unfold a magnetic bar and connect all three sections together as illustrated.






- There is a little "up" and "down" sticker on each magnetic bar to indicate the right way around.
- Slide the bottom of the contected magnetic bar onto the stud at the bottom of the frame, then snap the next two connectors onto the stud frame and then lastly lift the top of the magnetic bar section onto the hook at the top of the frame whilst reconnecting it back onto the other section of the magnetic bar at the same time.

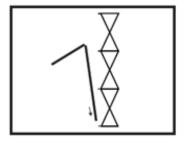

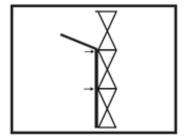


• Each frame has more than one magnetic bar so repeat the above steps untill all the magnetic bars have been attached to the frame.

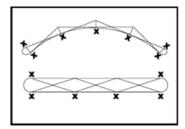

• Place the frame in the correct place before moving onto attaching the graphic panels, as the frame becomes difficult to move once the graphics panels are attached.



 
Nomadic Instand







Lights

- Before you lift the top of the magnetic bar section onto the hook at the top of the frame, slide the light onto the top of the magnetic bar as illustrated.
- Connect the top section of the magnetic bar onto the hook at the top of the frame whilst reconnecting it back onto the other section of the magnetic bar at the same time.
- Run the cord behind the display.

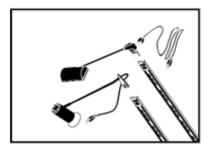

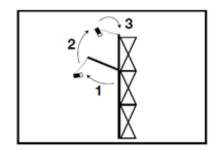


• Plug the light cords into the power outlet. Use the power switch to turn all lights on or off.

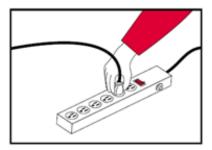

Graphic Panels

- Each graphic panel has a number at the bottom on the back. These numbers correspond with the placement of the panels. Number 1 relates to the side panel (or endcap) that wraps around the back of the frame on the left. Number 2 is the first front graphic panel and so on.
 - Lift the graphic panel (without creasing the panels in anyway) onto the studs at the top of the frame. Hook one side and then the other. Once hooked on, gradually and gently release downwards to bond magnets.
- Repeat this with all front graphic panels.

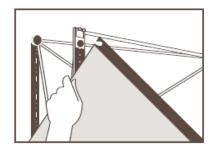





Nomadic Instand Set-up Instructions



• For the side end cap panel, hook one side and then the other. Slide hands along the length of the panel to bond magnets.

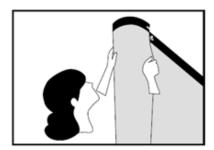

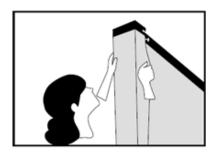

• Once all the graphic panels are in place, your stand should look like this:



Dismantling Instructions

Removal of graphic panels:

- The graphic panels need to be removed first.

 Place one of the clear plastic sheets on to the ground. Gently remove one front graphic panel (do the endcap panels last) by lifting the panel off the magnetic bars from the bottom first until the panel is no longer connected and then unhook it from the frame.
- Place the graphic panel **FACE** down onto the plastic sleeve and then roll it starting from the bottom. Once rolled, placed the graphic panel into the cylinder and then unswirl it so it's securely placed along the outer sides of the cylinder.
- Continue this until all graphic panels are removed and placed in the cylinder do the side endcap panels last.

Note: It is important that the plastic sleeve is used to ensure the graphic is protected and ensure each panel is placed in the cylinder separately.





Nomadic Instand Set-up Instructions




Removing Magnetic Bars and Collapsing Frames:


• Lift top section of magnetic bar up and rotate down. Twist bar to unsnap from frame and liftbar off the frame.

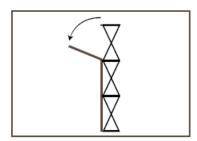

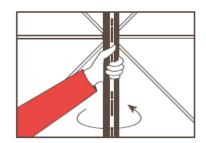

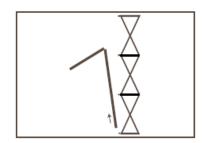

• Fold magnetic bar into 3, ensuring the magnets aren't touching eachother.

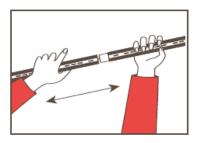

• To dismantle the frame, push on middle hub at back of frame while pulling on corresponding front hub. Nomadic Instand will sink to the floor. Handle frame at the hubs.

